


IMPORTANT:
Some cars, like Cherokee cant produce enough power in the turn signal to get a reaction from the Splitter.
To solve this you add a relay on on the blinker/brake wire as shown below.
The relay must be with a diode to prevent powerpeaks.

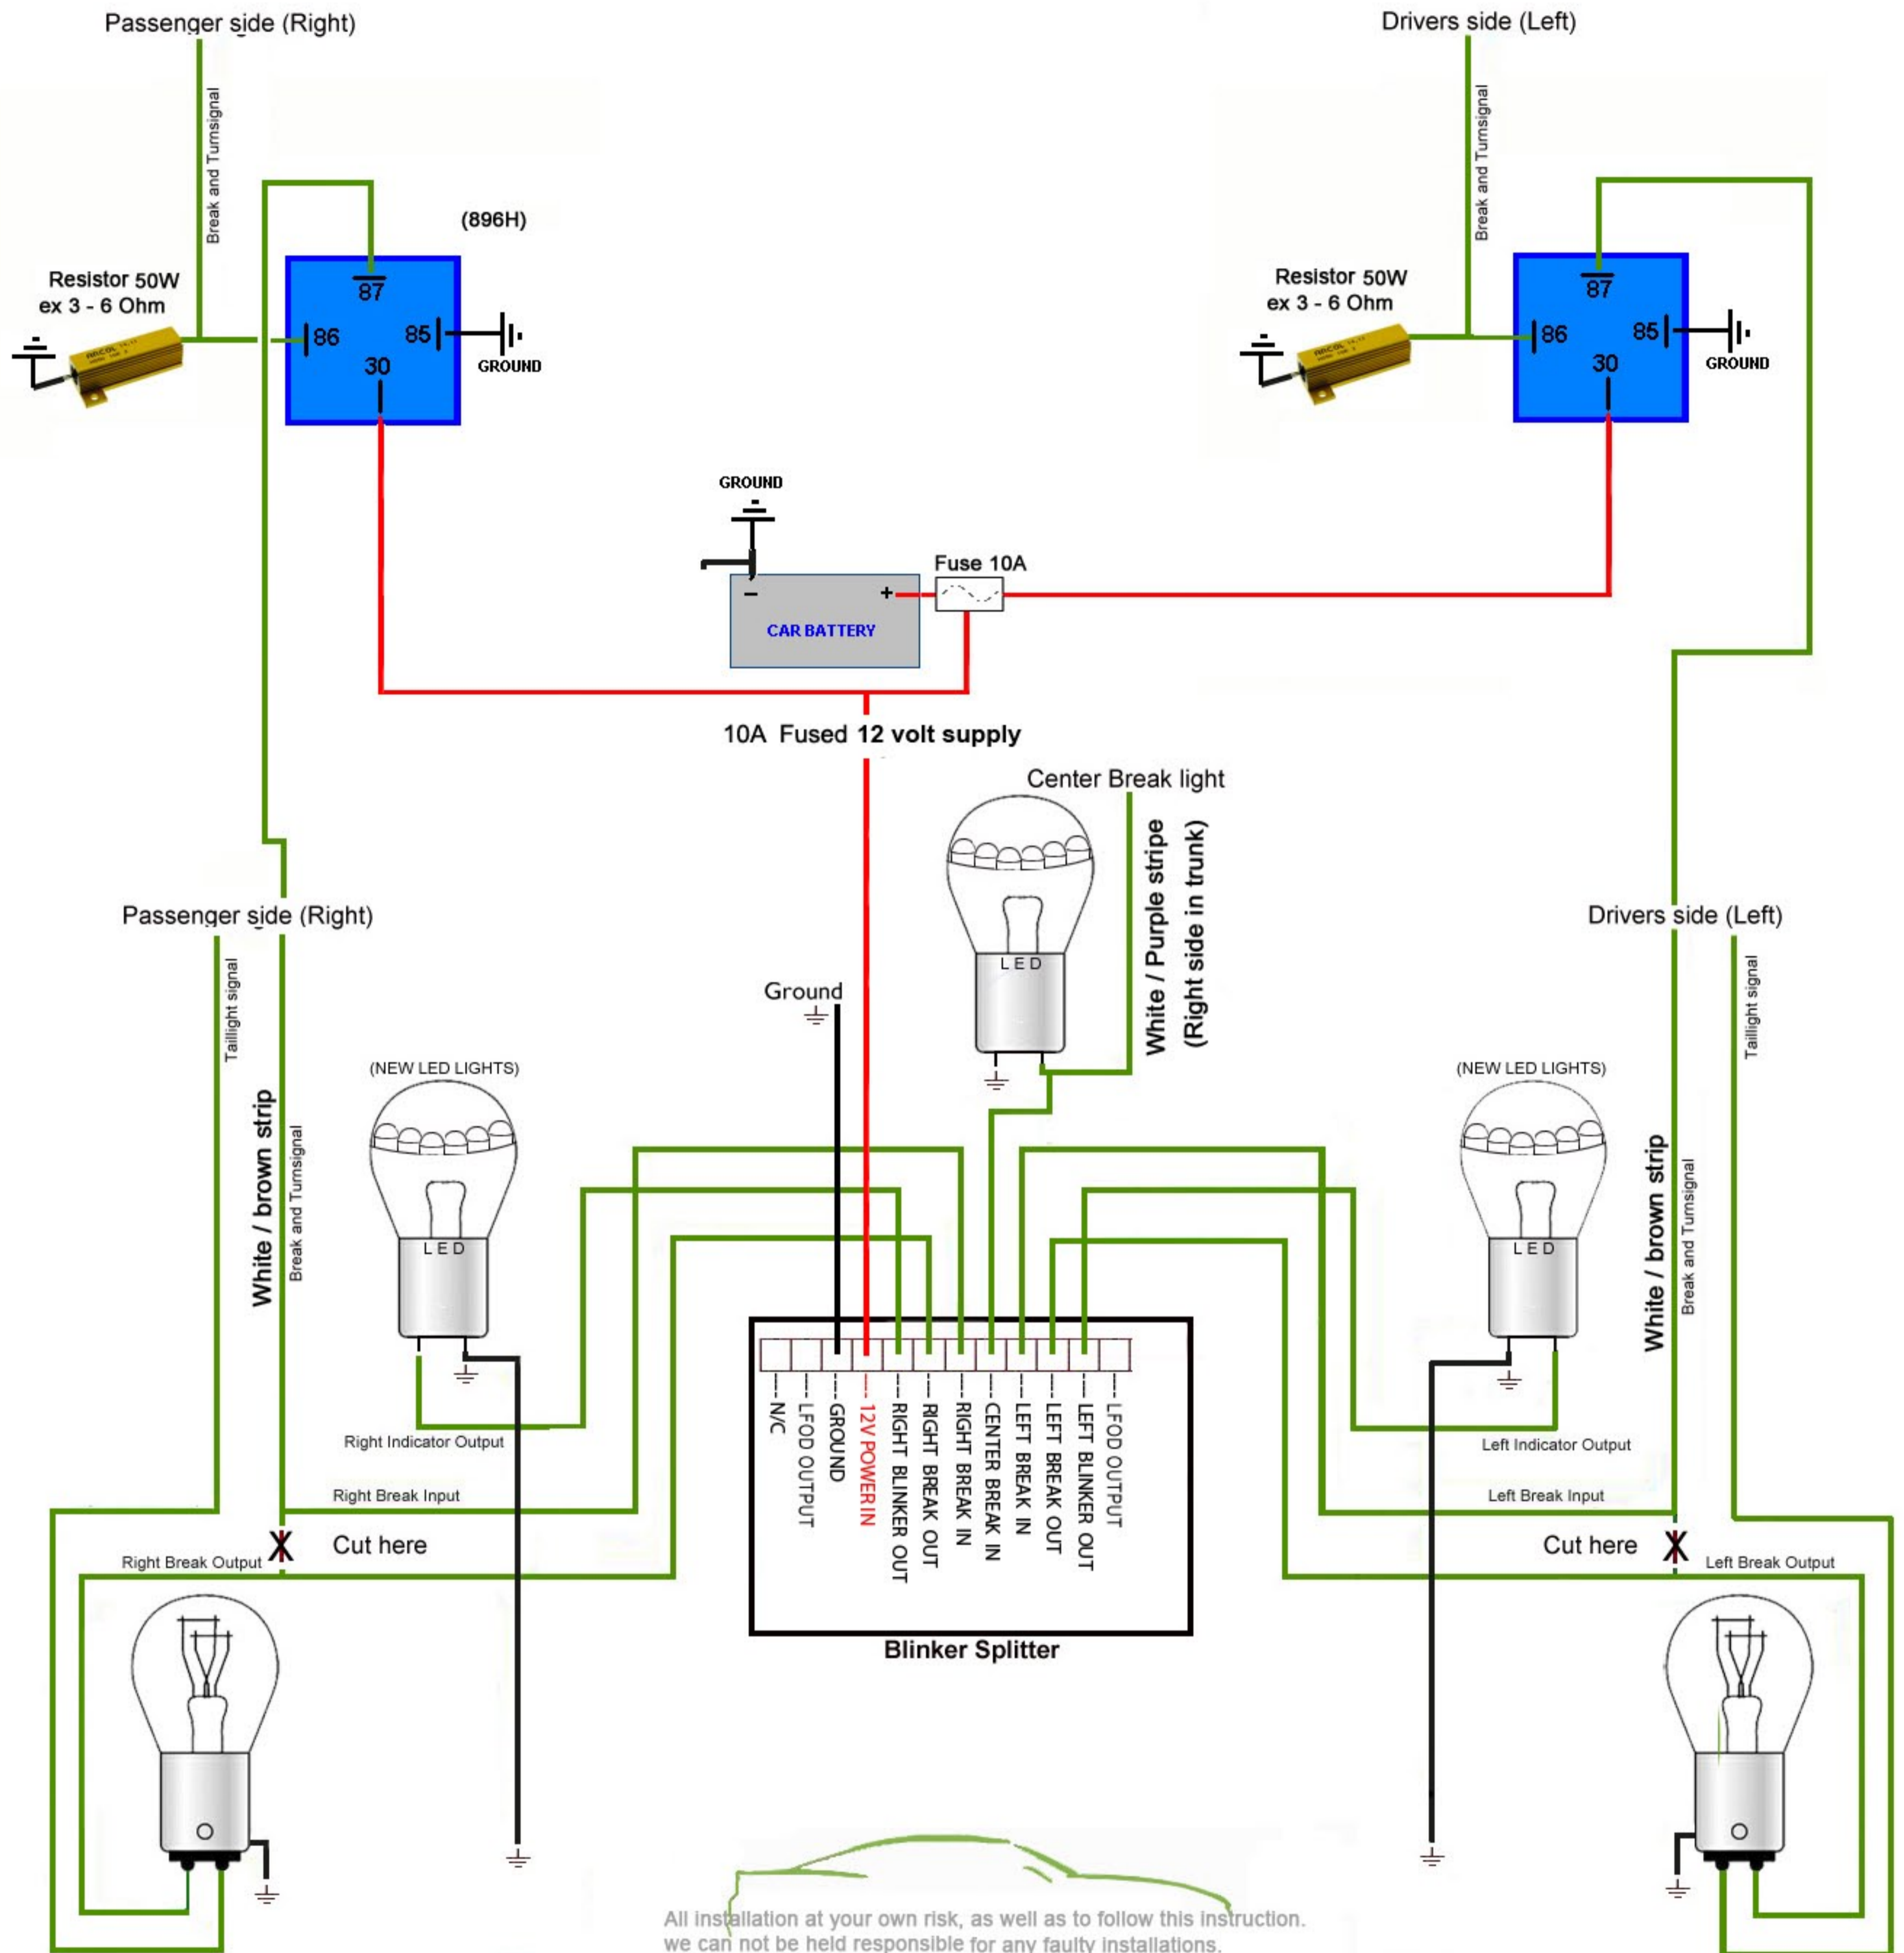

All installation at your own risk, as well as to follow this instruction.
we can not be held responsible for any faulty installations.
Are you unsure of what to do, you should consult a qualified installer.

- On Cartown.se you find what you need
- 1 pcs Main unit - Blinker Splitter (BS-1099)
- 2 pcs relays, - Relay with diode 896H (57-5783-relay)
- 1 pcs Fuse and fuseholder - Fuseholder (Fusehd)
- 1 kit sleeves with additive - Heat shrink sleeve (krymp_30_4)
- 1 pair Resistor (often needed) - Arcol 50W /6,8 Ohm (mot-62-8148)
- And just add the e-approved Swelght lamps you prefere